


Syringe pre-filled with BIOBank bone granules

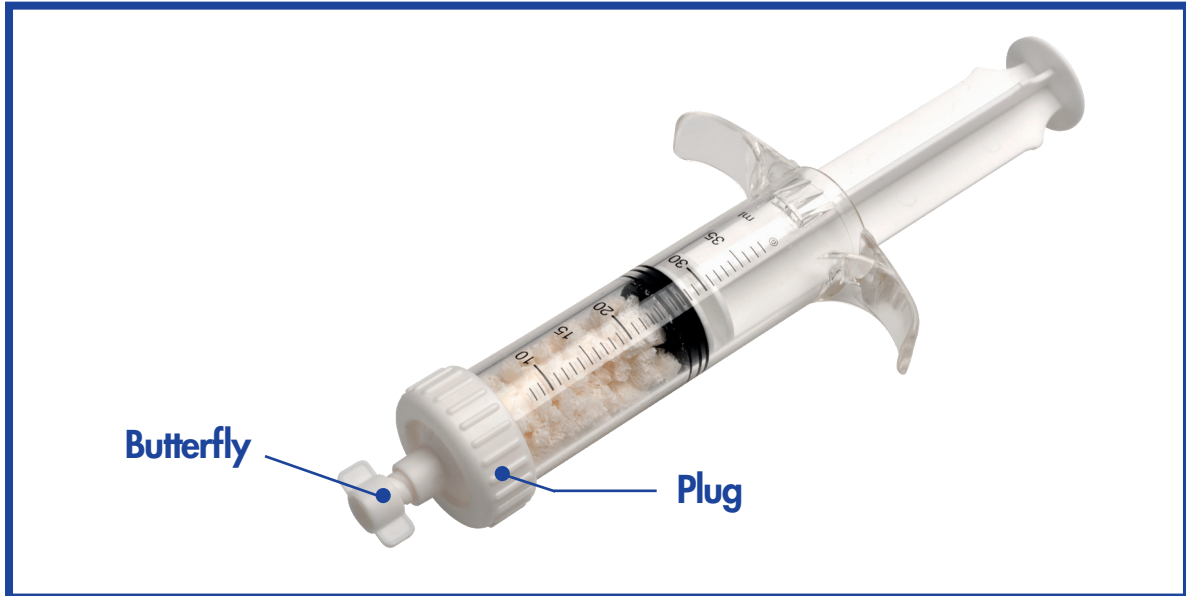

- 1** Unscrew the butterfly
- 2** Fill the syringe with a sterile sodium chloride solution and completely hydrate the bone granules
- 3** Evacuate the excess liquid
- 4** Screw the butterfly back in
- 5** Leave in contact for 10 minutes
- 6** Unscrew the plug from the syringe
- 7** Inject the rehydrated bone granules into the graft site